

DAIKIN

3P290325-1A M11B010A

Installation Procedure

DAIKIN OPTIONAL PARTS BKS028A4 INSTALLATION MANUAL

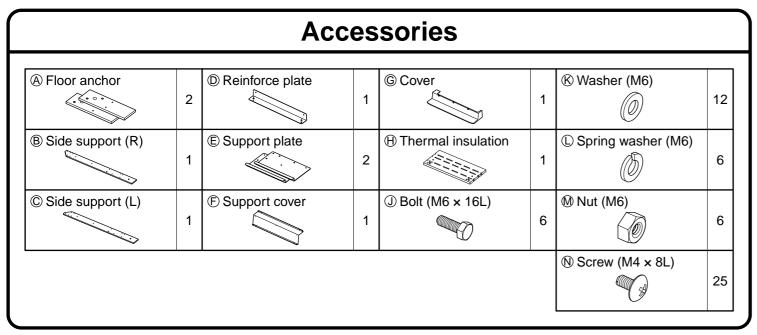


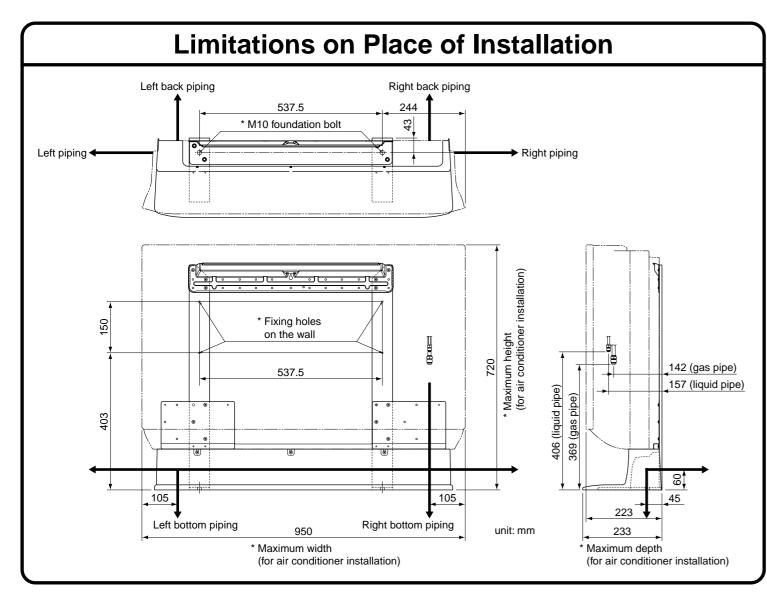

1. Assembling the installation frame.


parts shown below.

1) Fix the (A) floor anchor, (B) side support (R), (C) side support (L), and (D) reinforce plate at the 6 locations using the (Bolt (M6 × 16L), Washer (M6), Spring washer (M6), Nut (M6))

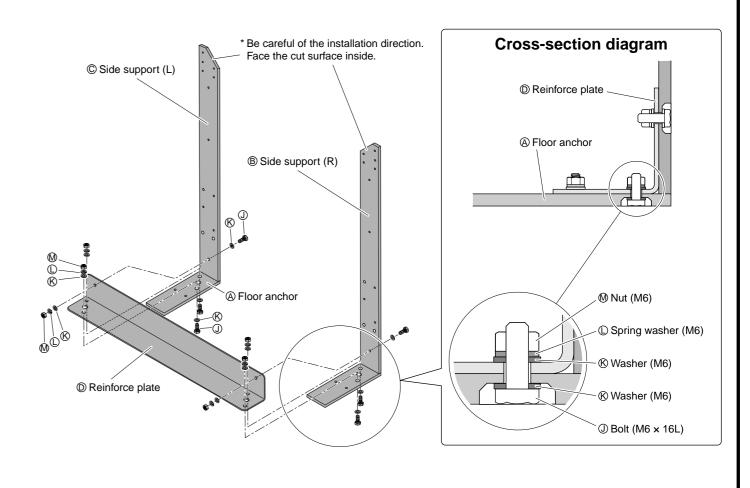


2. Fix the installation frame.

- 2-1) Fix the installation frame at 2 locations on the floor surface using the M10 foundation bolts. (field supply: M10 foundation bolt)
- 2-2) Fix the installation frame at 4 locations on the wall using screws. (field supply: M4 × 25L)

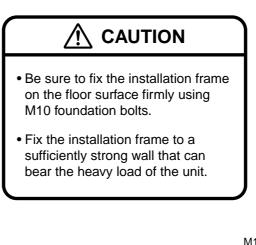


M10 nuts (field supply) (2 locations)

(2 locations)

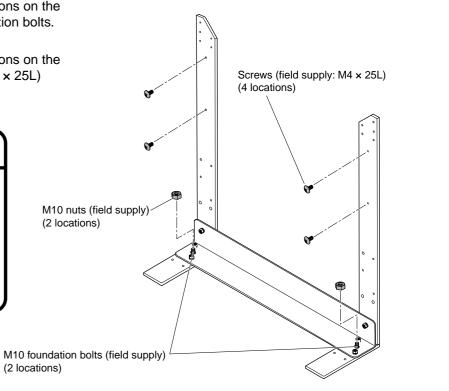


3. Preparing for the air conditioner installation.


- 3-1) Remove the pipe port cover on the bottom right of the air conditioner.
- 3-2) Set the (1) thermal insulation, and cover the field piping, drain hose, and inter-unit wiring with it. (Note: The (1) thermal insulation is used only when it is routed under the (2) support cover.)
- 3-3) Fix the (F) support cover at 8 locations on the installation frame using screws. (N) Screw (M4 × 8L))

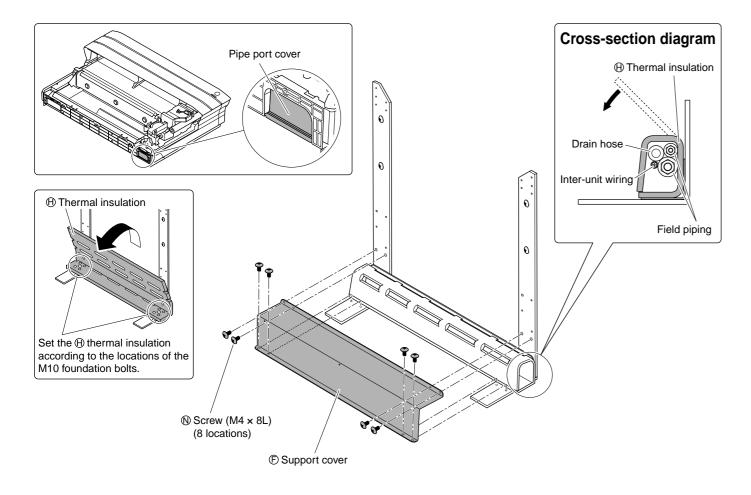


- 4. Installing the air conditioner and performing finishing.
 - installation frame using screws. (N Screw (M4 × 8L))

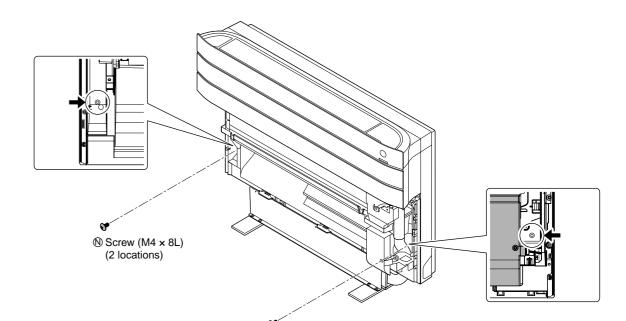

4-2) After connecting the field piping, drain hose, and inter-unit wiring, fix the G cover at 3 locations on the installation frame using screws. (N Screw (M4 × 8L))

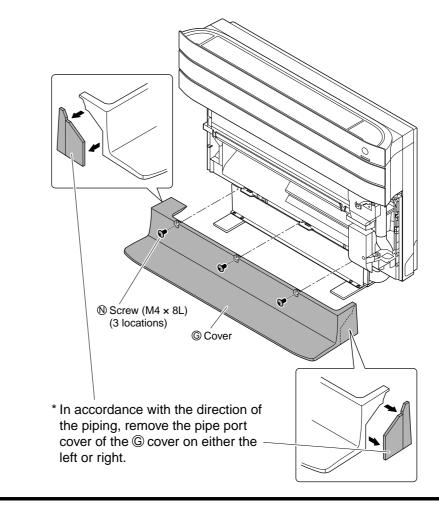

- 3-4) Fix the (E) support plate (2 pcs.) at 6 locations on the installation frame using screws. (N Screw (M4 × 8L))
- 3-5) Fix the mounting plate (supplied with the air conditioner) at 6 locations on the installation frame using screws. (N Screw (M4 × 8L))

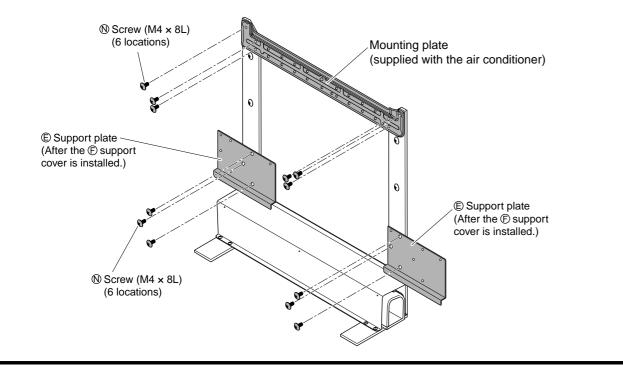

4-1) Hook the air conditioner on the mounting plate (supplied with the air conditioner), and fix it at 2 locations on the

